



Scan for cleaning videos,
tips & more info!

Auto Scrubber

1



Sweep and remove large debris and trash from the floor. Pay special attention to entrance doors and floor edges where dirt and dust are most likely to collect.

2



Dip the scrub brush into the cleaning solution and scrub soiled and high traffic areas thoroughly. Pay special attention to entrances, furniture bases, and areas prone to spills and soil.

3



Fill the tank with fresh water and add CreteClean Plus. Do not add the cleaner before the water. This could result in unnecessary foaming.

4



Auto scrub the floor according to the equipment manufacturer's recommendations. As a general rule, an auto scrubber will clean approximately 500-1000 ft² per gallon of cleaning solution.

5



Use a squeegee to pull any residual cleaning liquid away from the wall edges towards the center of the room.

6




When finished, pick up the remaining liquid with the auto scrubber.

1



Do not allow spills to dwell on the floor. Display "Wet Floor" sign and clean immediately with a damp mop.

2

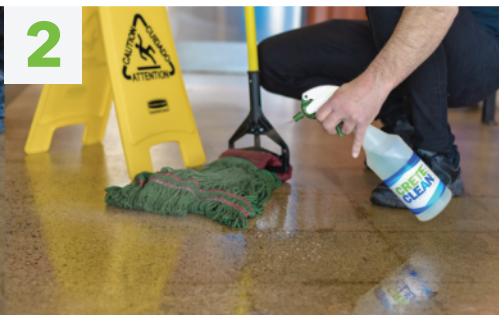

Spray the affected area generously with CreteClean Plus cleaning solution to lift any remaining contaminants out of the concrete pores.

3



Mop the area a second time, ensuring that the cleaning solution and contaminants have been removed completely. Allow the floor to dry.

DAILY CLEANING

SPILLS